




**User Manual**

**Ablerex Power Master**  
**Mac OS X**




The information presented in this manual is not warranted by Alerex to be authoritative, error free, or complete. Alerex assumes no liability for damages, violations of codes, improper installation, system failures, or any other problems that could arise based on the use of this publication.

Alerex reserves the right to make changes or updates with respect to or in the content of the publication or the

format thereof at any time without notice.

Copyright, intellectual, and all other proprietary rights in the content (including but not limited to software, audio, video, text, and photographs) rests with Alerex or its licensors. All rights in the content not expressly granted herein are reserved.

No rights of any kind are licensed or assigned or shall otherwise pass to persons accessing this information.



<b>1.</b>	<b>Installation Instructions</b>	2
1.1	System requirements	2
1.2	Install AblereX PowerMaster	2
1.3	Uninstall AblereX PowerMaster	8
<b>2.</b>	<b>Function Descriptions</b>	9
2.1	Real-Time Monitoring Display	9
2.2	Status and Settings	10
2.3	Data Log	13
2.4	Shutdown OSX	14
2.3.2	Other Functions	15
3	Power Master Troubleshooting Guide	16
3.1	Power Master program failure during installation or operation..	16

# 1. Installation Instructions


The free software is available for all single-phase UPS models and downloadable from [www.ablerex.eu/download](http://www.ablerex.eu/download)

## 1.1 System requirements



- Operating System (OS) Mac OS X: Version 10.5: "Leopard", Version 10.6: "Snow Leopard", Version 10.7: "Lion", Version 10.8: "Mountain Lion", Version 10.9: "Mavericks", Version 10.10: "Yosemite", Version 10.11: "El Capitan", Version 10.12: "Sierra", Version 10.13: "High Sierra", Version 10.14: "Mojave", Version 10.15: "Catalina.
- Communication Port: USB Connector

## 1.2 Install Ablerex PowerMaster


- 1.2.1 Switch on the UPS. Connect the UPS comm. Port to the Computer USB port.
- 1.2.2 Insert the Power Master software CD into the computer CD drive. If the computer is running on Mac OS X v10.5 Leopard, click 10.5 folder to select "Power Master.mpkg". If the computer is running on Mac OS X v10.6 Snow Leopard, click 10.6 folder to select "Power Master.mpkg".

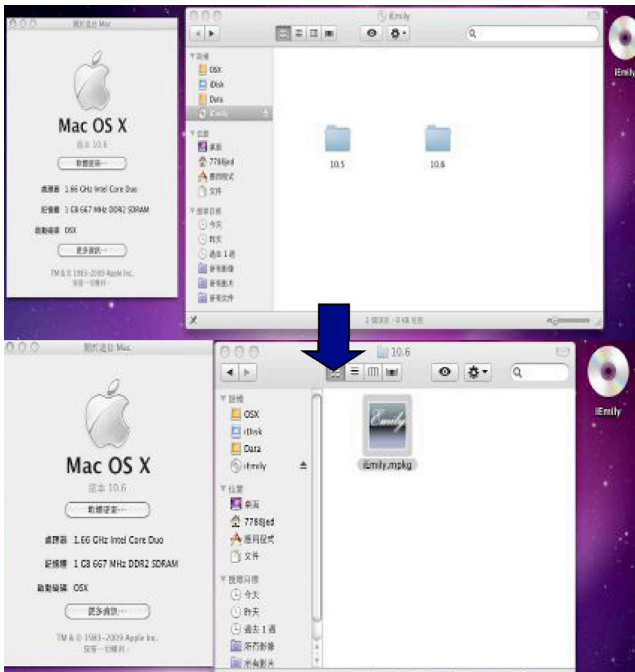

1.2.3 Upon seeing the “Install Power Master” page as shown below, click [Continue] to proceed installation.

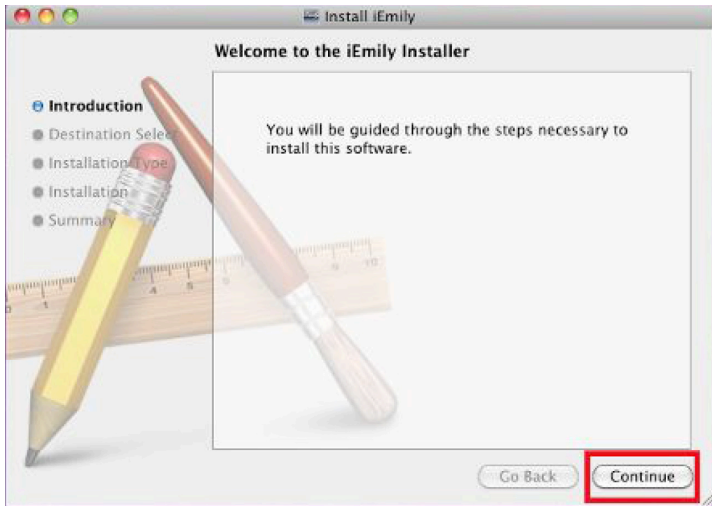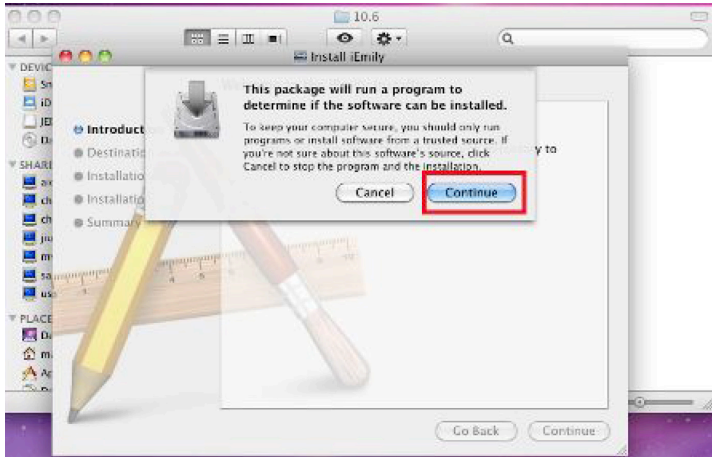


1.2.4 The “Select a Destination” setup page allows user to select the desired location to save the Power Master program. The “Setup” program will automatically select the computer harddrive “Snow Leopard” as the default location.

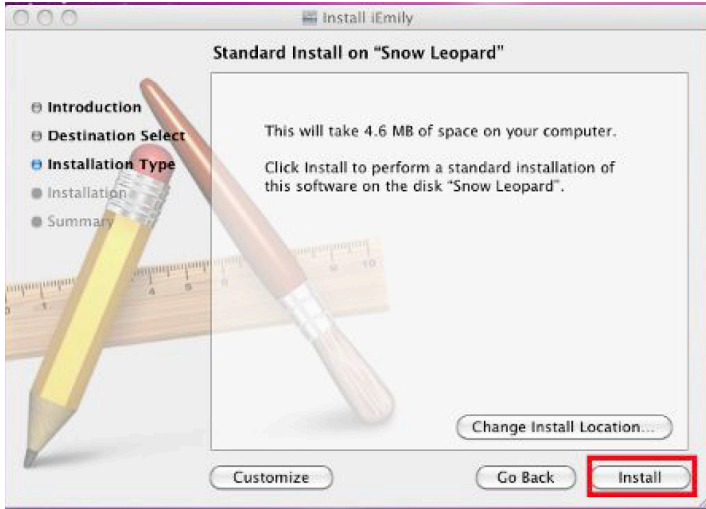



1.2.5 Enter User name and password. If there is no password given, leave it blank and click [OK].



1.2.6 This page displays installation completes.

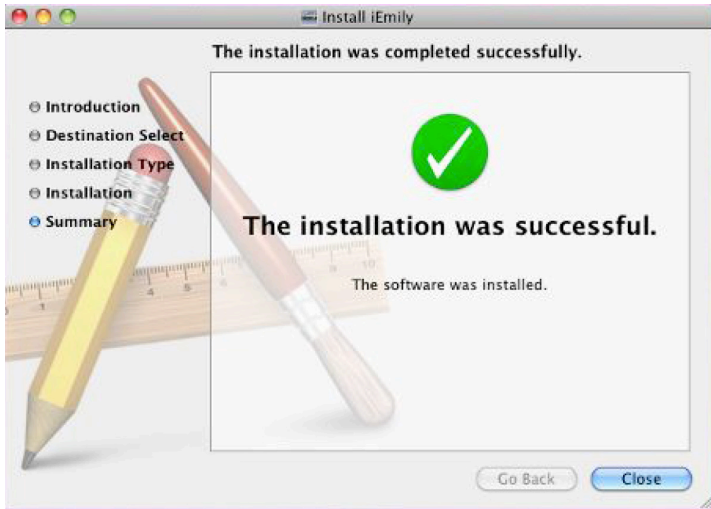

1.2.7 Open Applications Folder to run Power Master software.

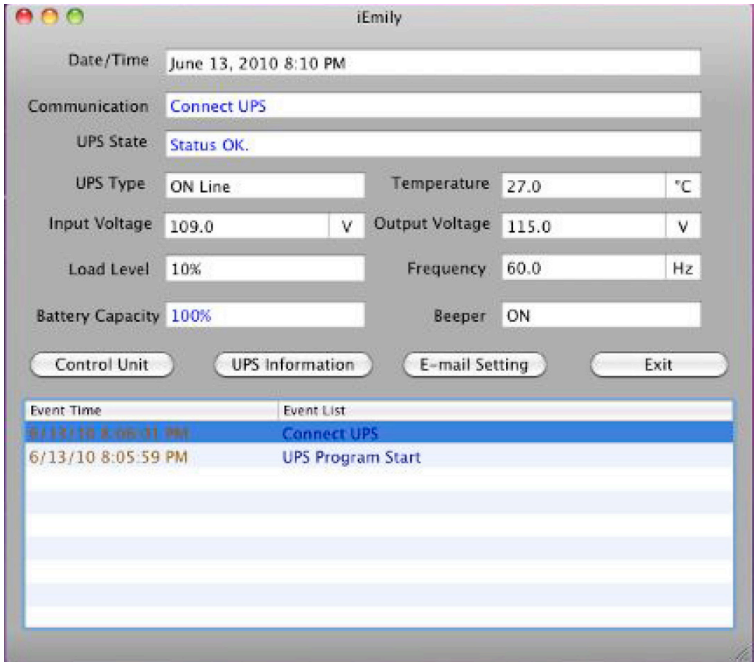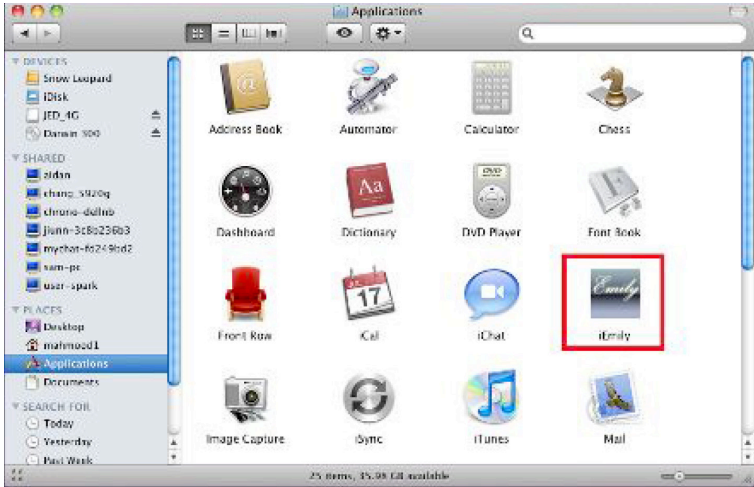




1.2.8 Right-click Power Master in Dock, go to Options, user can select to run Power Master automatically when computer login – “Open at Login” or turn on Power Master manually – “Keep in Dock”. Select one.



# 1.3 Uninstall Ablerex PowerMaster

1.3.1 Open Applications Folder, drag the Power Master to the Trash bin to uninstall Power Master.

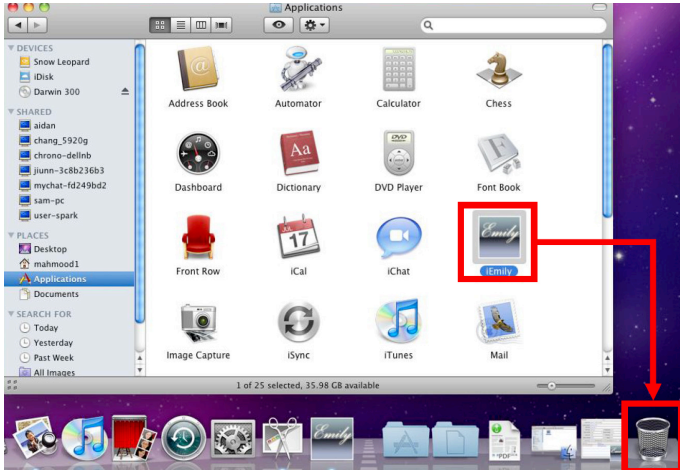

## 2. Function Descriptions

Power Master program is a user friendly UPS monitoring program which enables communication between UPS and computer via USB port. It provides easy to read realtime monitoring of important UPS parameters such as input/output voltage, frequency, UPS temperature, loads and battery capacity. The Event log display UPS status and record a list of history events. In event of Power outage or abnormality, the Power Master program is capable of automatically informing user via email instantly.

### 2.1 Real-Time Monitoring Display

The screenshot shows the iEmily software interface. It features a date/time display at the top, followed by communication and UPS status sections. Below these are various monitoring parameters like UPS Type, Temperature, Input/Output Voltage, Load Level, Frequency, and Battery Capacity. A control menu is located at the bottom, and an event log table is at the very bottom. Callouts A, B, C, and D point to specific parts of the interface.

Event Time	Event List
2010/5/12 下午 4:59:04	UPS Power On
2010/5/12 下午 4:58:08	Mail has already been sent
2010/5/12 下午 4:58:04	UPS Shut Down
2010/5/12 下午 4:57:36	Mail unable to send
2010/5/12 下午 4:57:31	Battery returns to normal
2010/5/12 下午 4:57:21	UPS Selt Test
2010/5/12 下午 4:56:43	Mail has already been sent
2010/5/12 下午 4:56:38	Battery Fail

**A. Status** (points to Communication and UPS State)

**B. UPS Information** (points to UPS Type, Temperature, Input Voltage, Output Voltage, Load Level, Frequency, Battery Capacity)

**C. ??? point** (points to the right side of the main monitoring area)

**D. Control Menu** (points to Control Unit, UPS Information, E-mail Setting, Exit buttons)

**D. Event Log** (points to the Event List table)

## 2.2 Status and Settings

A. Status:

Communication: Display UPS communication signal


UPS State: Display UPS status

B. UPS Information


Displays input/output voltage, frequency, load capacity (display up to 120%), battery capacity (display up to 100%).

C. Control Menu:


1. Control Unit: UPS Control Panel

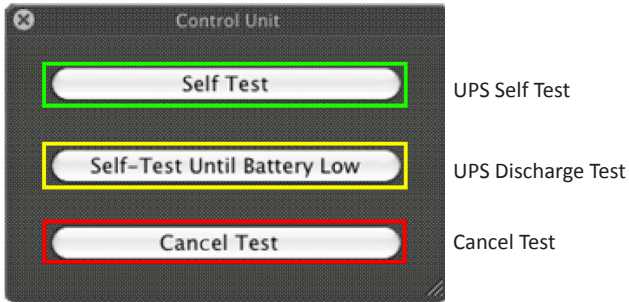

2. UPS Information Display

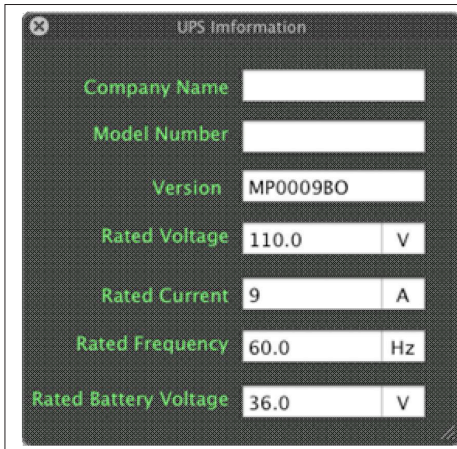

3. E-mail Setting: Below is the Mail Setting Dialog Box.  
To send email alert to multiple recipients, insert a semi colon (;) or comma (,) between each email address.

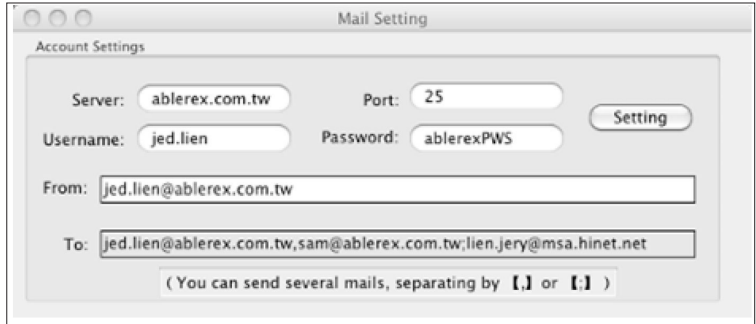

4. Upon entering e-mail information, click on [Setting] to save e-mail information. A dialog box will appear to do a mail test.  
Note; Internet Firewall may block this e-mail function. If you have installed firewall, please enable this function.



5. This page displays email sent successfully.

Event Time	Event List
2009/12/27 下午 3:47:26	Mail has already been sent
2009/12/27 下午 3:47:24	AC Failed
2009/12/27 下午 3:47:18	Connect UPS
2009/12/27 下午 3:47:16	UPS Program Start

6. This page display email delivery failure.

Event Time	Event List
2009/12/27 下午 3:49:12	Mail unable to send
2009/12/27 下午 3:49:11	AC Failed
2009/12/27 下午 3:48:56	Connect UPS
2009/12/27 下午 3:48:55	UPS Program Start

D. Event Log: Display events and UPS status.

iEmily

Date/Time: June 13, 2010 8:56 PM

Communication: [Connect UPS](#)

UPS State: [Status OK.](#)

UPS Type:  Temperature:  °C

Input Voltage:  V Output Voltage:  V

Load Level:  Frequency:  Hz


Battery Capacity:  Beeper:

Event Time	Event List
6/13/10 8:56:40 PM	Mail unable to send
6/13/10 8:56:39 PM	AC Recovery
6/13/10 8:56:21 PM	Mail unable to send
6/13/10 8:56:20 PM	AC Failed
6/13/10 8:40:19 PM	Connect UPS
6/13/10 8:40:15 PM	Disconnect UPS
6/13/10 8:40:08 PM	Connect UPS
6/13/10 8:40:07 PM	UPS Program Start



2.4 Shutdown OSX

1. When UPS status is AC Fail or battery failure, the software will pop a message box that is 2 minutes count down.
2. When the grid system and battery system doesn't return to normal after two minutes, the software will force shutdown the MAC operating system.

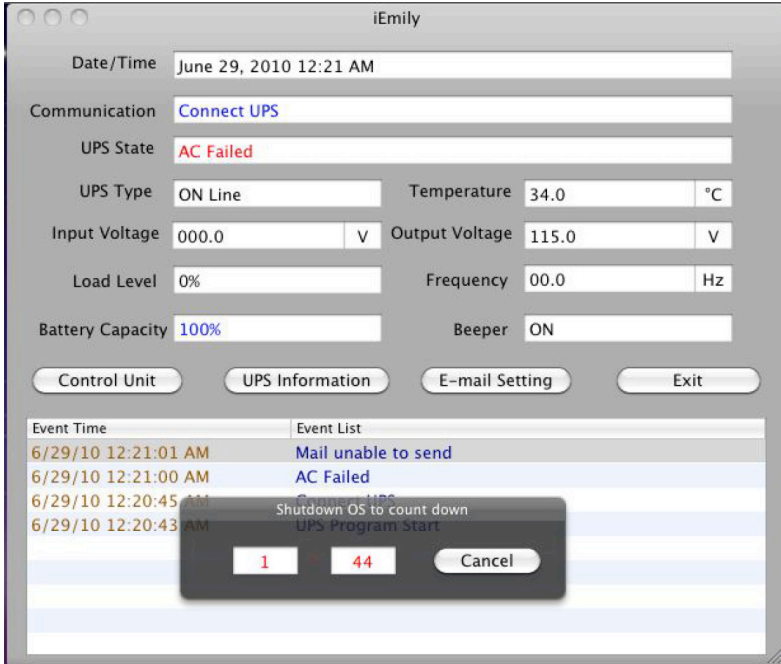




2.5 Other Functions

I. Hide Power Master: Click “Power Master” from the program toolbar, select [Hide Power Master].

Users can hide Power Master dialog box while Power Master program works in the background.

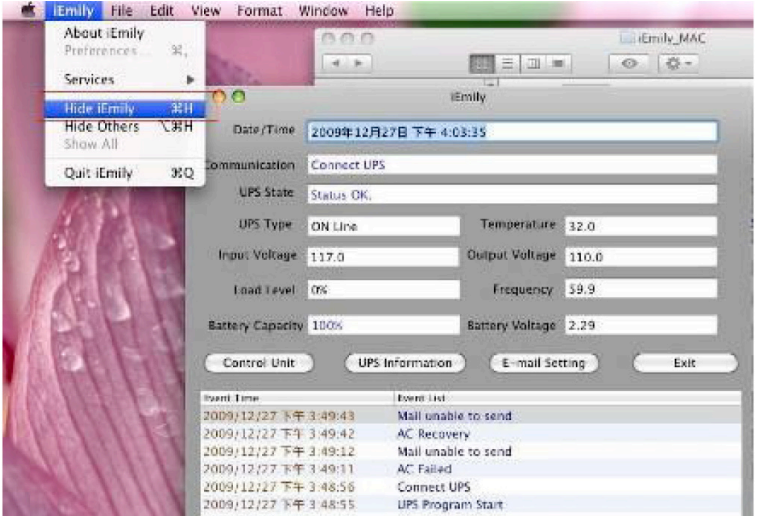


II. Power Master Help: Click “Help” from the program toolbar to run Power Master Help




### Power Master Troubleshooting Guide

3.1 Power Master program failure during installation or operation.  
Power Master program installation is unsuccessful if the following dialog box appears during installation or operation.

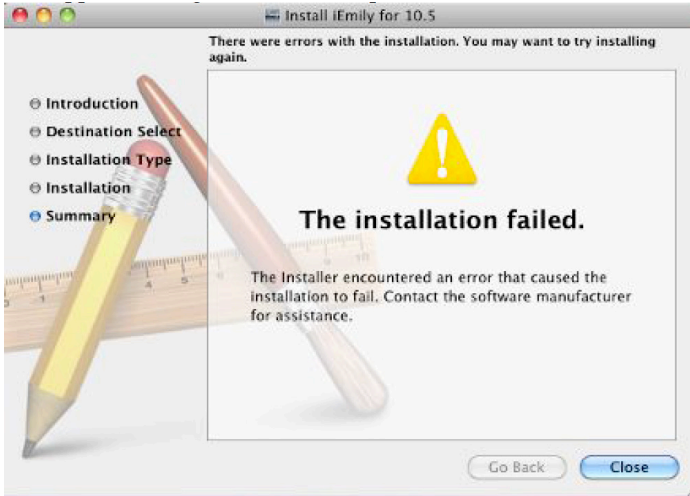


Solution: Mac OS not compatible with Power Master  
3.1.1 From the Apple menu, select “About This Mac”

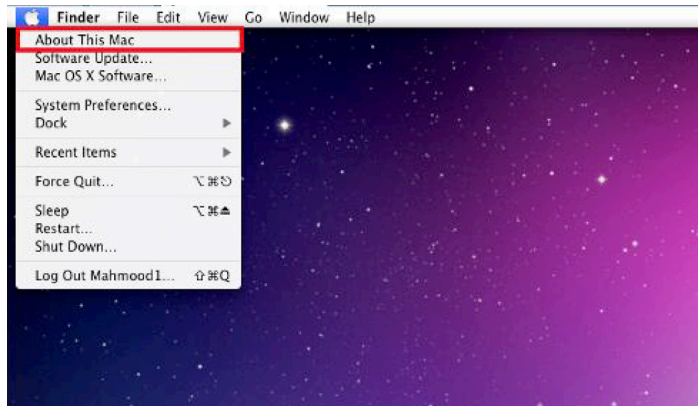

The resulting window shows your operating system. In this example, you are using Mac OS X, version 10.6.2




3.1.2 Delete the current Power Master program from the Applications folder. Right-click the Power Master and select "Move to Trash".

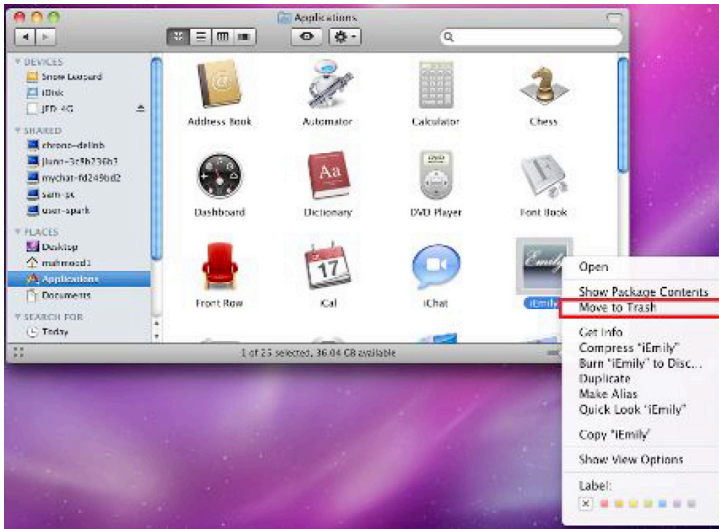

3.1.3 Enter User name and password. If there is no password given, leave it blank and click [OK].



3.1.4 Click the Trash icon in the Dock. Select “Empty Trash” to delete all files in the trash.

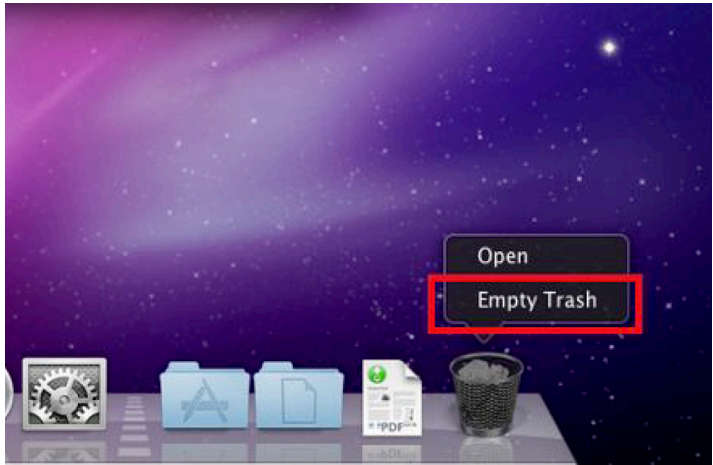

3.1.5 Reinstall Power Master.mpkg.

The computer is running on Mac OS X v10.6, click 10.6 folder to select “Power Master.mpkg”.

